


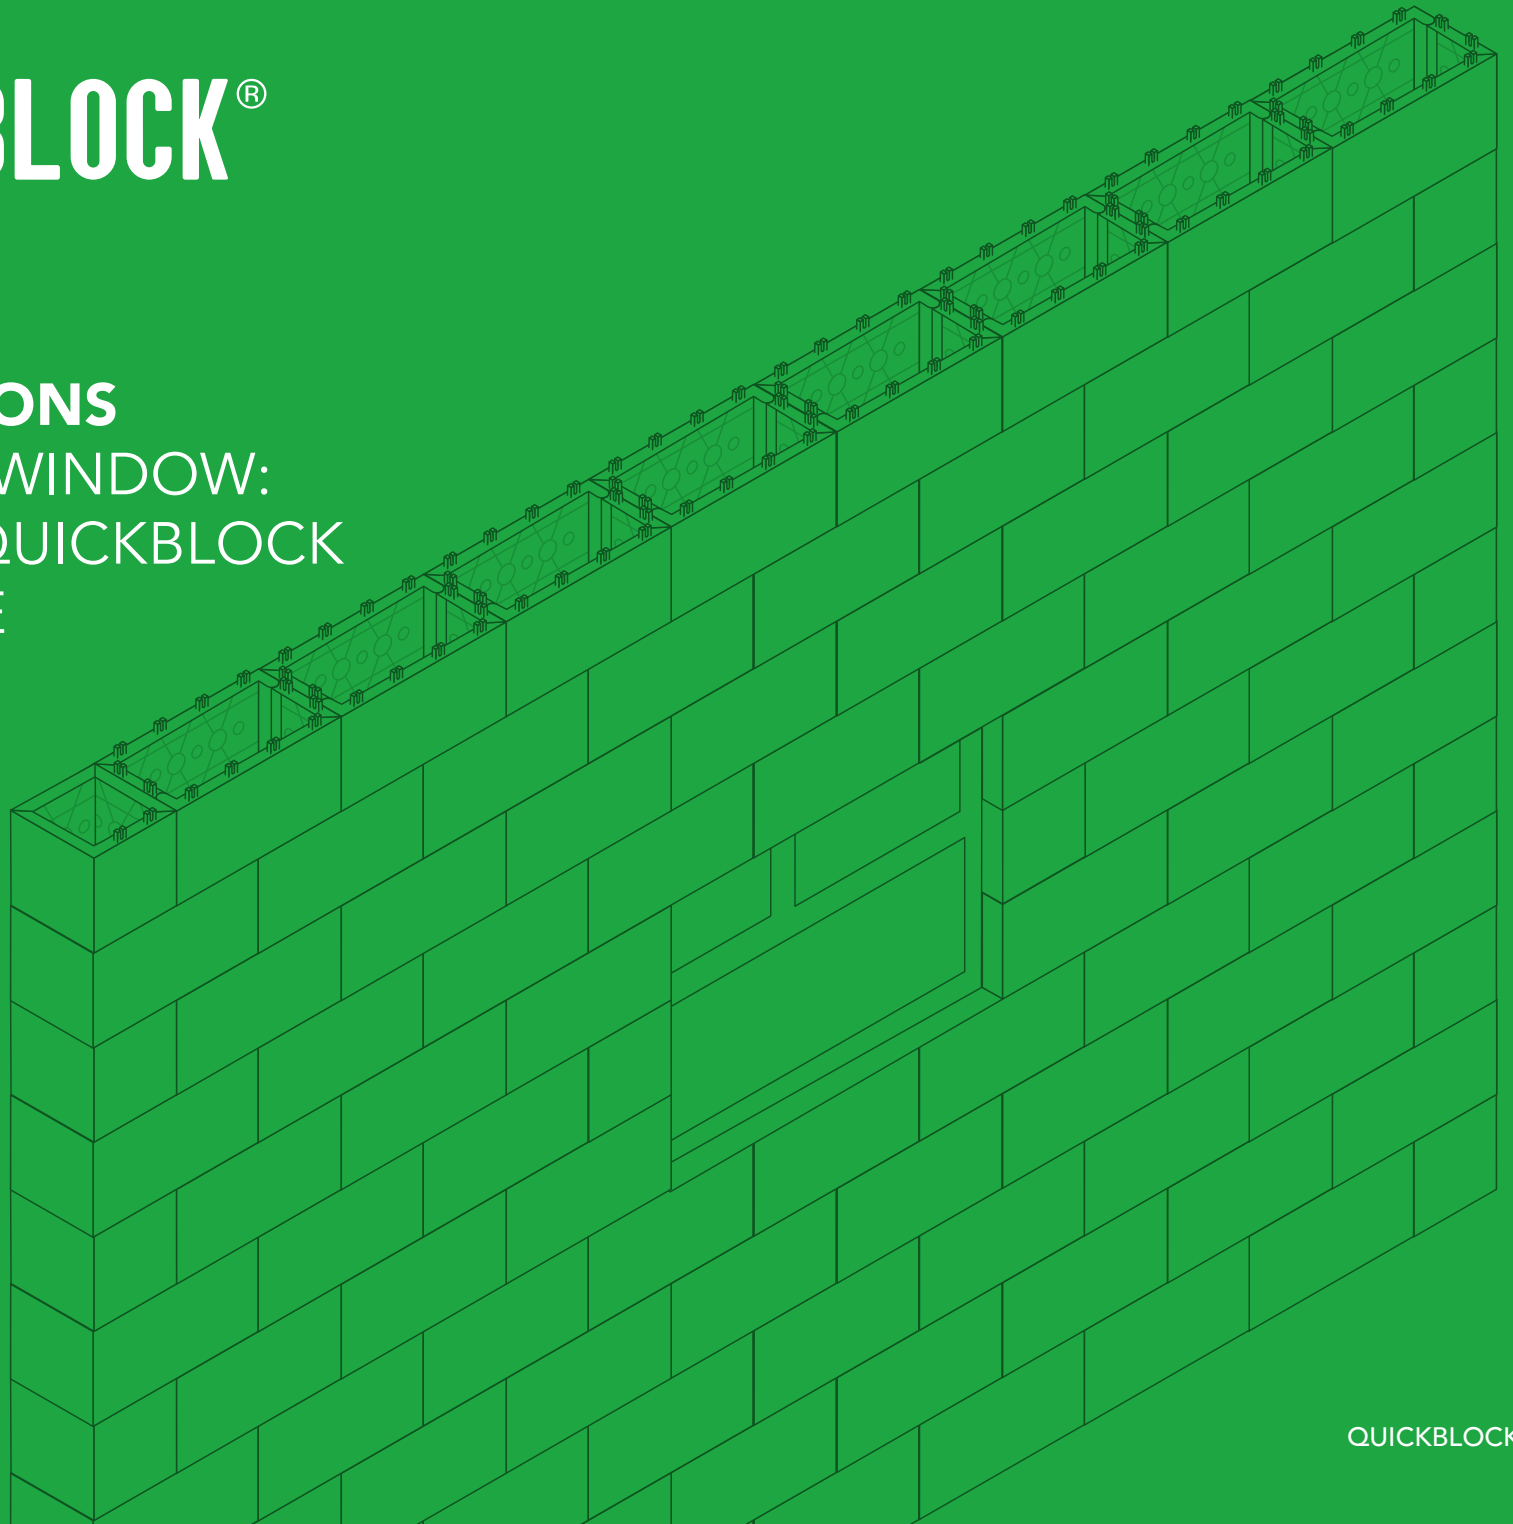

QUICKBLOCK®


INSTRUCTIONS

ADDING A WINDOW:
WITHIN A QUICKBLOCK
STRUCTURE




Follow the QUICKBLOCK instructions when building ensuring all blocks are locked firmly in place.


Use hard hats, eye protection, and appropriate footwear during construction.

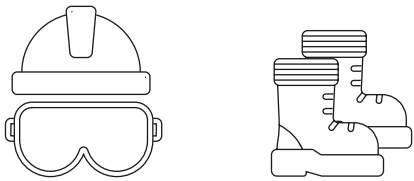


Be aware of fingertraps when opening and closing the blocks, we recommend users wear gloves when building with QUICKBLOCK.

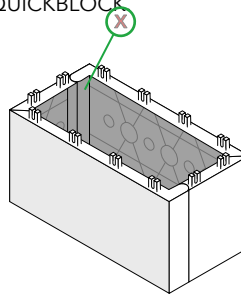

Do not construct above 12 blocks in height without advice from qualified personnel.

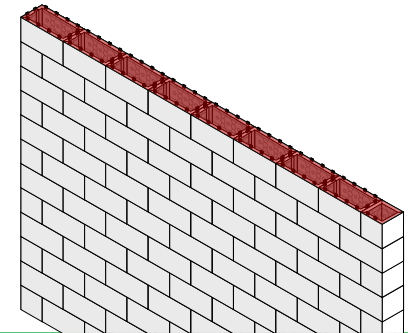


For long walls, strengthen with right angles buttressing (at 2m intervals) or integrate rooms / corners to provide stability.

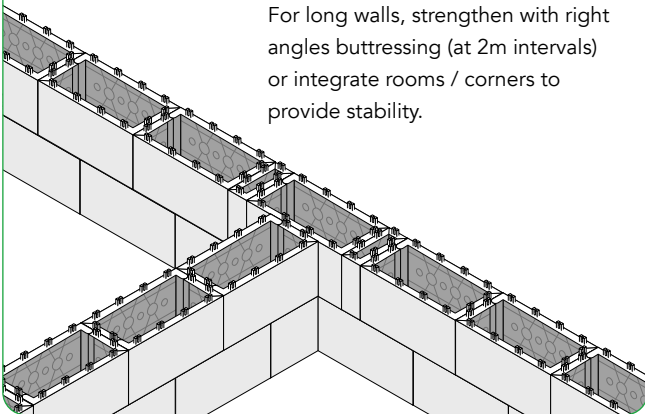

Do not climb or place heavy loads on QUICKBLOCK walls unless rated for it.


Where possible, construct on level and stable ground.

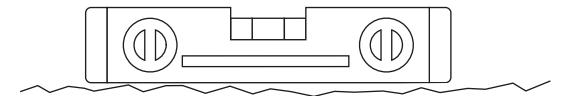


Avoid using blocks in ways not intended by the manufacturer. For more info, see the instruction manual.




OPEN

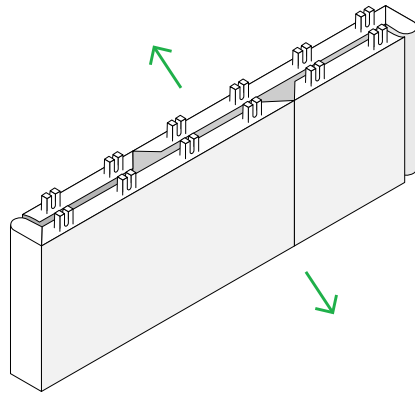

CLICK

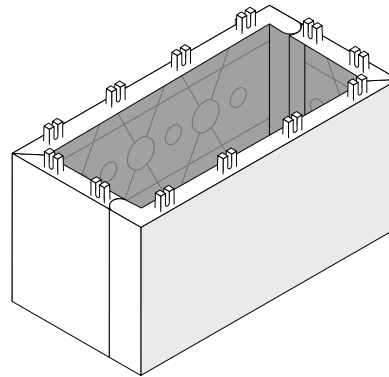

BUILD

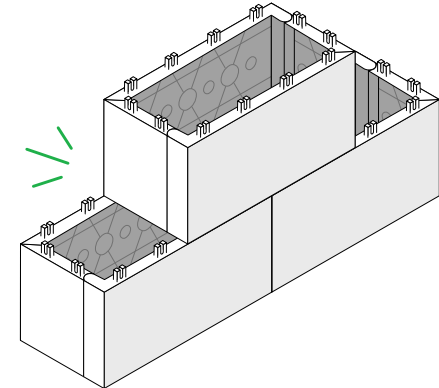

Opening blocks with excess force may result in blocks becoming damaged. It is recommended that blocks are opened with two hands and moderate force. QUICKBLOCK does not accept responsibility for blocks that are broken due to user error.



ADDING A PVC WINDOW WITHIN YOUR STRUCTURE

It's easy to install a traditional UPVC window into your QUICKBLOCK structure to create that perfect garden room, office or shed.

This guide will walk you through the process of installing a UPVC window into a QUICKBLOCK structure. Whether you are building a permanent or temporary installation, this manual provides clear step-by-step instructions to help you.

To make installation as simple as possible, you can order your UPVC window in the exact size required for your QUICKBLOCK opening. This ensures a precise fit, reduces the need for additional adjustments, and guarantees a professional result.

By following this guide carefully, you'll achieve a durable and functional window installation that compliments the strength and flexibility of your QUICKBLOCK build.



STEP 1



Once you receive your made to order window, make sure the sill fits in place. Then measure out and mark where the screws will go into the capping pieces.

Use a countersink bit to ensure that the screws don't stick up to the top.


Screw in the screws to attach the sill.

STEP 2



Get the window frame and make sure it overlaps the sill.

STEP 3

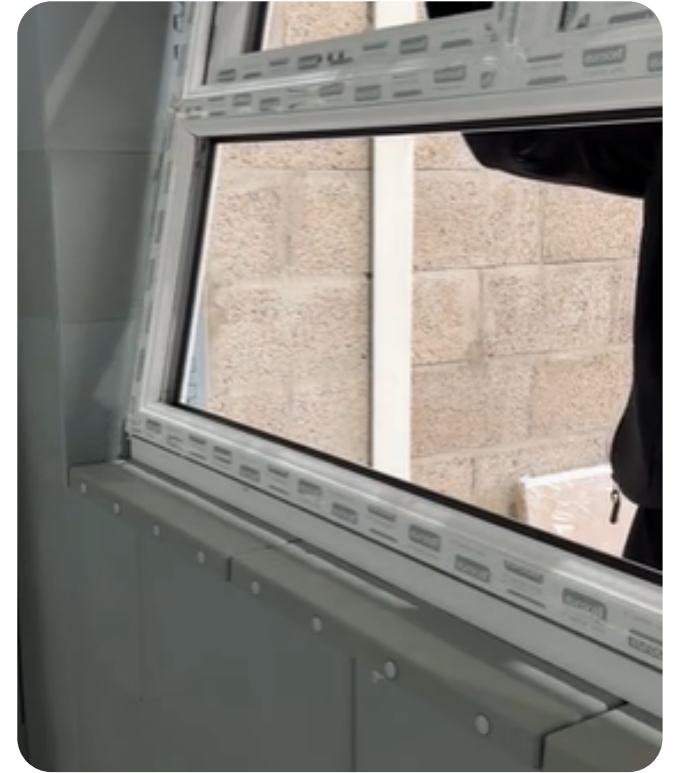

Push it into the opening and make sure it is level with the wall.



STEP 4



Begin to attach the frame to the sill on the bottom.

STEP 5



Screw in at the sides and checking it's level as you go.

STEP 6



Using a countersink bit here just make sure that the screws don't stick out and disturb where you are going to place the glass panes in.



STEP 7



As easy as that! Now add in the glass panes and you now have a window! Enjoy your QUICKBLOCK structure with your window.

Marc, Our Product Manager, shows you how easy it is to install a PVC window into a QUICKBLOCK structure in the video on our website and our YouTube channel.

We always appreciate hearing from our customers. If you have feedback or suggestions, please get in touch, we'd be glad to hear from you.



